




Foodja Mobile Printer Instructions- Apple/IOS

Step 1 . Take battery out of white box and insert into the back of the printer


Step 2 . Ensure test paper inside printer is first removed , then insert new roll with shinier side facing Foodja logo.

Step 3 . Power on by holding power button for at least 2 seconds. Printer lights will illuminate.

Step 4 . Download app. Search "Rongta". Select "RTPrinter System". **NOT "RTPRINTER X"**

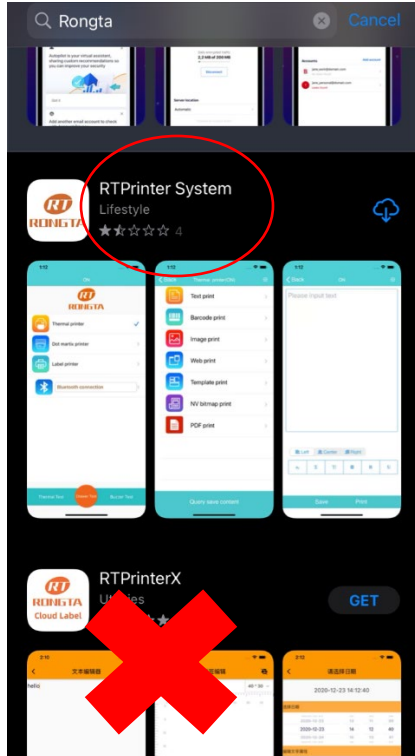


Step 5 . Open App, select "Thermal Printer"

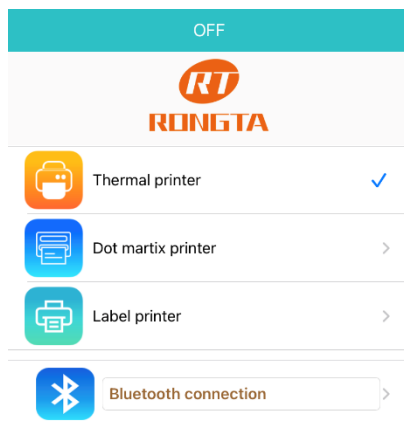


Step 6 . Make sure y our phone Bluetooth is active and when prompted select “OK” or “Allow” Bluetooth

May prompt to allow permissions


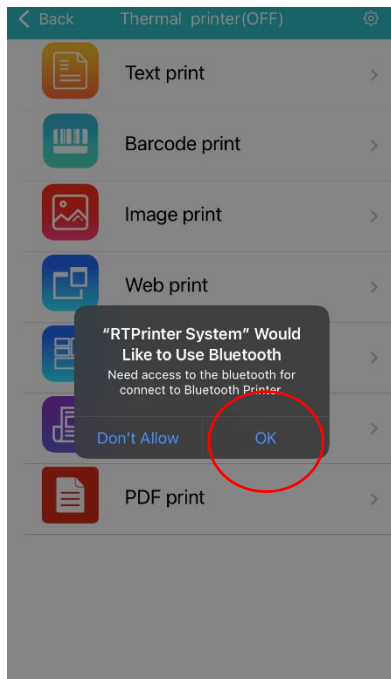


Step 7 . Click on the “Gear” icon on the top right of the screen.


Step 8 . In Settings, change Width to 70 and Cut Distance to 4

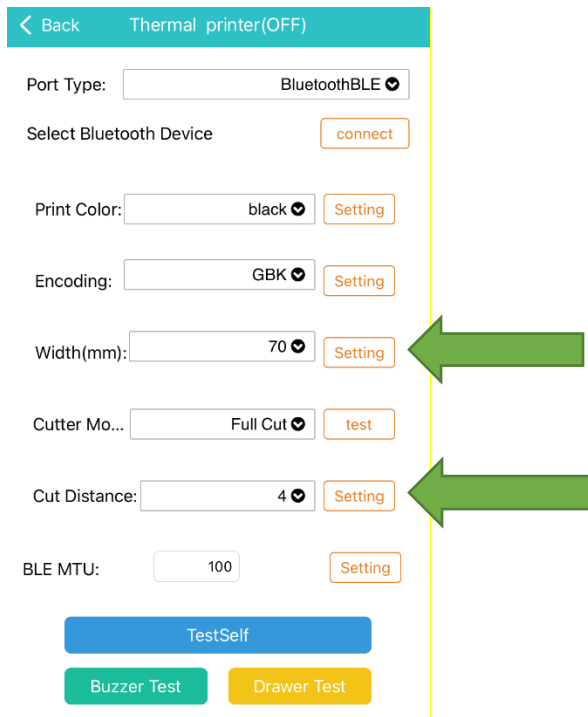

Step 9 . Connecting printer to phone via Bluetooth. With mobile printer on, go to the main menu and click **"Bluetooth Connection"**

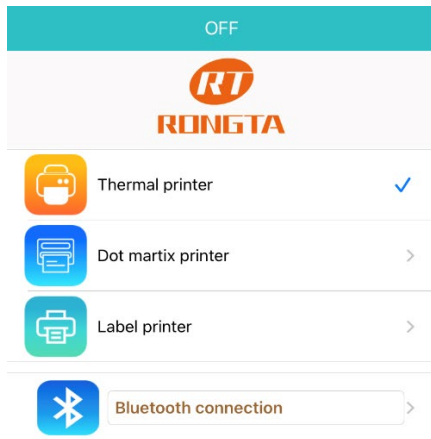

Step 10 . Click on **"Disconnected"** tab and look for a device **"RPP300"** and press the Disconnect button. A pop up will show it's connected.

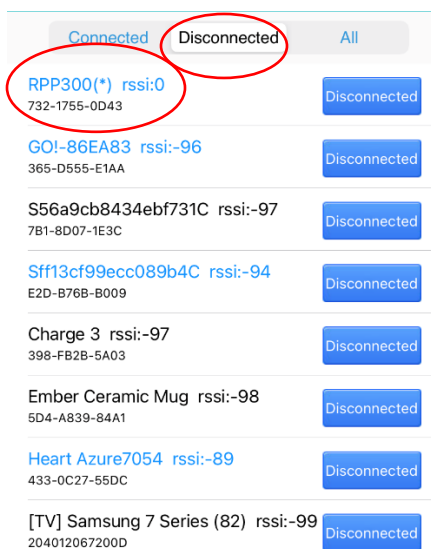




Step 11 . Once connected the home screen will show it's connected to the mobile printer.





Step 12 . Switch over to the Foodja App and go to the order. Click on the Label icon and that will pull up a webpage with the order. Copy the URL.



Step 13 . Go back into the Rongta mobile printer app. Click on **"Thermal printer"**, then click on **"Web Print"**

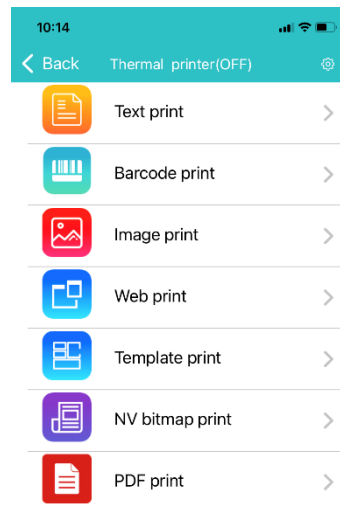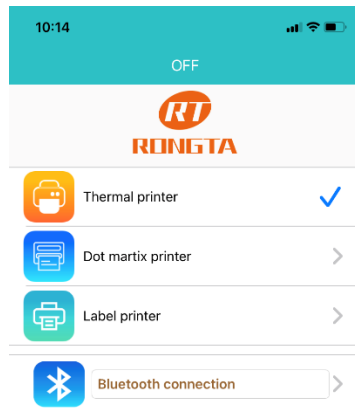

Erase the <http://www.rongtatech.com> that comes up in the box, and paste the order URL in that box and click **"preview"**

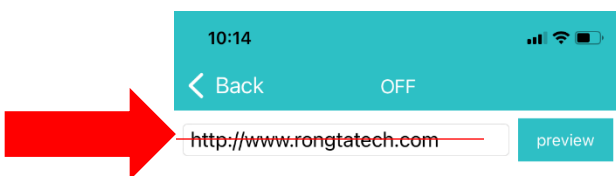


Step 14 . Press **"Print"** and a "Capture web page" box will display.

It is important to not leave this page while the label is being printed. Leaving the page will cause the printer to stop.

OPTIONAL

If your screen shuts off, it will also stop the printing. You may need to change your iOS setting of "Auto-Lock" to a couple minutes.

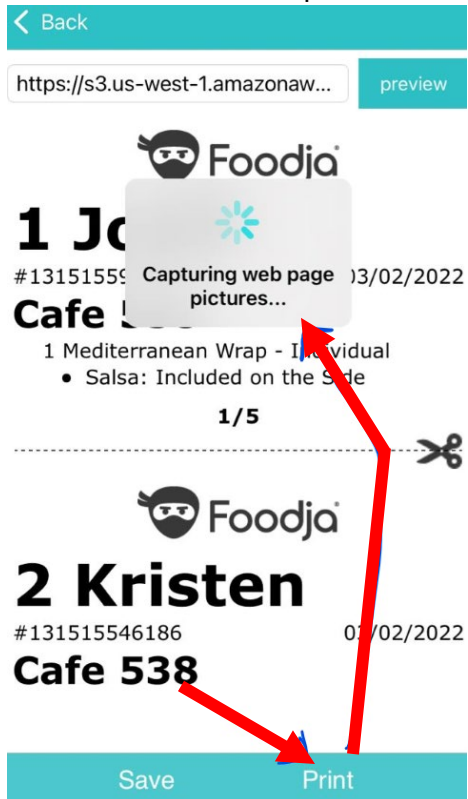

Step 15 . When done, press the "Back" button at the top to exit.